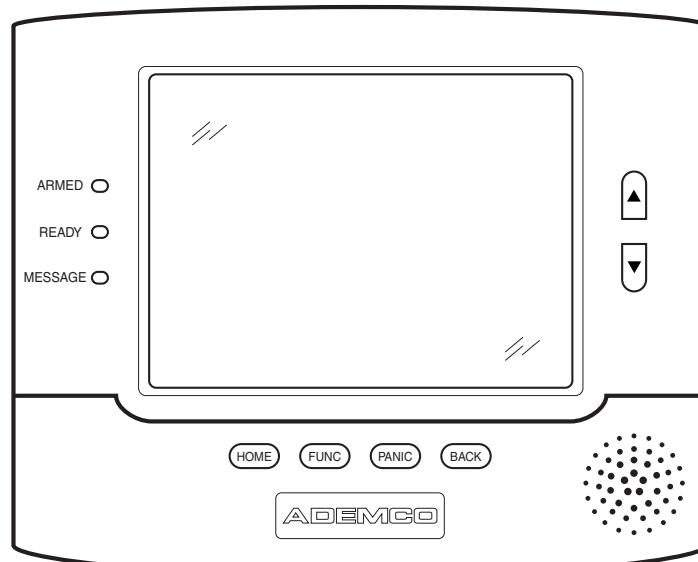


6270 Touch Screen Keypad

Installation and Setup Guide



® ADEMCO

K0977 4/03

Table of Contents

.....


SECTION 1 – General Information.....	1-1
About the 6270.....	1-1
System Features.....	1-1
Security.....	1-1
Setup.....	1-1
Compatibility.....	1-2
ECP Error.....	1-2
SECTION 2 – Mounting and Wiring.....	2-1
Mounting the 6270.....	2-1
Wiring the 6270.....	2-2
SECTION 3 – Front Panel LEDs and Buttons.....	3-1
Front Panel LEDs.....	3-1
Front Panel Buttons.....	3-2
SECTION 4 – Initial Setup.....	4-1
Programming the Control Panel.....	4-1
6270 Initialization.....	4-2
Power Up.....	4-2
How to Change the ECP Address.....	4-2
How to Access the Central Station Screen.....	4-3
How to Select System Options.....	4-6
How to Set the NIGHT Setup Button Function.....	4-7
How to View and Edit Screen Security.....	4-8
How to View the Panel Configuration.....	4-9
6270 Setup.....	4-10
How to Adjust the Touch Screen Contrast.....	4-11
How to Adjust the Volume.....	4-12
How to Select Screen Saver Activation Time.....	4-13
How to Set the Time and Date.....	4-14
Setting Chime Mode On/Off.....	4-15
SECTION 5 – User Codes.....	5-1
Introduction to User Code Setup.....	5-1
How to Access User Setup.....	5-1
How to Add a User.....	5-3
How to Delete a User.....	5-5
How to Edit a User.....	5-6
SECTION 6 – Maintenance.....	6-1
About 6270 Maintenance.....	6-1

How to Clean the 6270	6-1
Routine Care	6-3
SECTION 7 – Troubleshooting.....	7-1
Troubleshooting	7-1
Diagnostics	7-1
About Diagnostics	7-1
How to Access the Diagnostics	7-1
Performing Diagnostics	7-3
LCD Display Test.....	7-3
Audio Test.....	7-6
LED Test.....	7-7
SECTION 8 – Specifications	8-1
Specifications	8-1
SECTION 9 – Index.....	9-1

Conventions Used in This Manual

Before you begin using this manual, it is important that you understand the meaning of the following symbols (icons) and text note.

UL These notes include specific information that must be followed if you are installing this system for a UL Listed application.

 These notes include information that you should be aware of before continuing with the installation, and which, if not observed, could result in operational difficulties.

Note: These text notes are provided throughout the manual to provide informative information and shortcut tips for the installer.

General Information

In This Section

- ◆ *About the 6270*
- ◆ *Compatibility*
- ◆ *System Features*

About the 6270

The 6270 is an intuitive, graphical touch-screen keypad that combines security and home control. The 6270 can be used for:

- Quick and easy security system operation
- Messages
- Control of the home environment, including lights and contains provisions for the future control of heating and air-conditioning.

UL The home environment control feature has not been evaluated by UL.

System Features

Security

- Arm System
 - Away
 - Stay
 - Night
- Disarm System
- User Codes - Allows authorized user to add or delete codes
- Bypass Zones

Setup

- Volume
- Contrast

- Diagnostics
- Keypad Emulation

Compatibility

The below listing identifies the alarm systems that the 6270 can interface with, the maximum number of 6270s that can be used with each system, and the minimum alarm panel software revision level for compatibility.

<u>ALARM SYSTEM</u>	<u>MAXIMUM NUMBER OF 6270s</u>	<u>MINIMUM SOFTWARE REVISION LEVEL</u>
VISTA-20PS	2	All Levels
VISTA-128BP	3	2.4
VISTA-128FBP	3	1.6
VISTA-250BP	3	2.4
VISTA-250FBP	1	1.5
FA168CPS	2	All Levels
FA1660C	3	2.4
FA1700C	1	1.5



On all panels except the VISTA-20PS and FA168CPS, you may obtain the software revision level of the alarm panel by entering the program mode and then entering #92 on the keypad. The second line of the keypad displays the software revision level (without the decimal point).

ECP Error

The message “ECP Error” will be displayed at the top of the screen (except for the Home screen) when the 6270 cannot communicate with the alarm panel. This may be caused by an incorrect ECP address in the 6270 or because AUI type devices have not been enabled in the panel. While this message is being displayed, you must use the 6270 default code of “4140” any time the 6270 requests an authorized code.

Mounting and Wiring

In This Section

◆ *Mounting the 6270*

◆ *Wiring the 6270*

Mounting the 6270

The 6270 should be mounted using the following criteria:

- The 6270 must be mounted **indoors**, and
- should be mounted at eye level for easy viewing by the user.

To mount the 6270, see Figure 1 and complete the following steps:

1. Detach the case back by pushing up into the two tabs located at the bottom of the 6270 with the blade of a screwdriver while pulling the case back and case front apart.
2. Locate the case back over the mounting surface such that the opening in the case back is aligned with the wire/cable access opening (in the mounting surface) while passing the wires/cable through the opening in the case back.
3. Secure the case back to the mounting surface using four screws (supplied).



Prior to attaching the case front to the case back, be sure to wire the 6270 as described in the "*Wiring the 6270*" paragraph in this section.

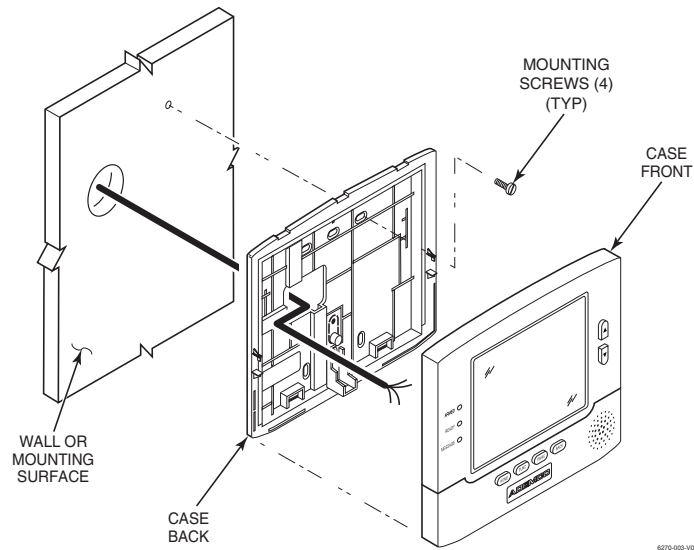


Figure 1. Mounting the 6270

Wiring the 6270

Connect 6270 in parallel with keypads and other peripheral devices using the keypad data (ECP) bus. To wire, see the Summary of Connections diagrams at the back of this guide, or the appropriate Systems Interconnection Diagram provided, and follow the instructions below.

UL

- The 6270 must be used in conjunction with a second keypad that is powered by the control panel.
- Use a Listed Class 2 power supply suited for the application.



Unshielded 4-conductor cable is recommended for the power/data wire.

Connect the wires to the 6270 terminal block as follows:

1. The 6270 has holding clips on the case back to hold the case front while you are wiring the unit. Hang the case front on the holding clips as shown in Figure 2.

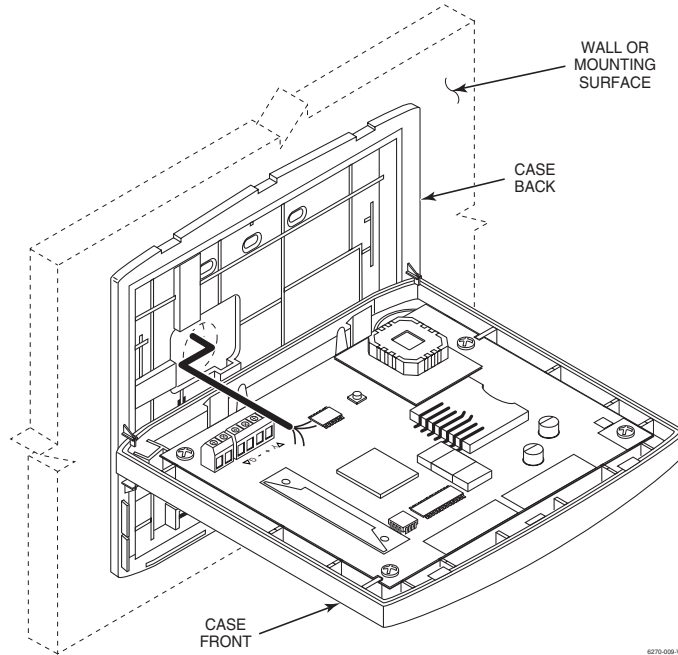


Figure 2. Wiring Preparation

2. Connect the + terminal of the supplementary power supply to terminal block position 2 (+12VDC terminal of the 6270 (red wire)).

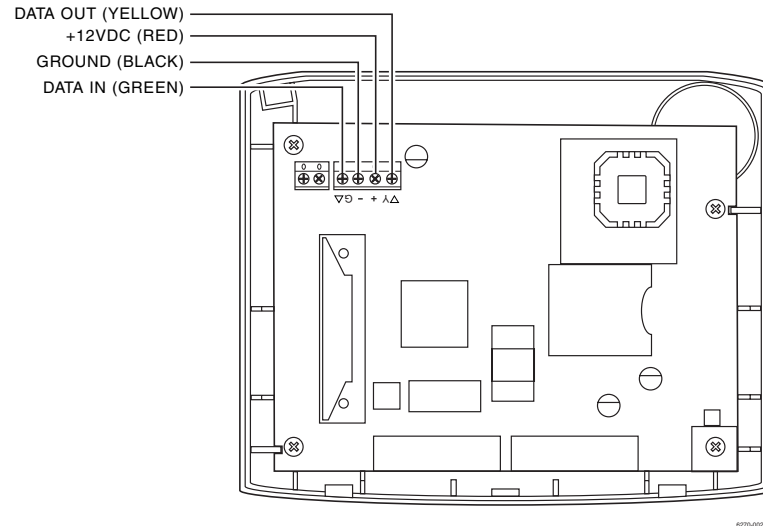


Figure 3. Wiring the 6270

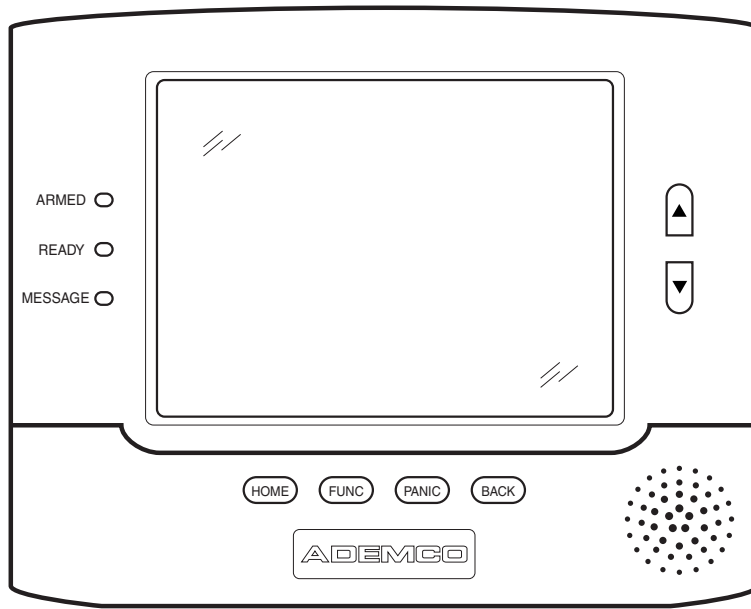
3. Connect the AUX – terminal of the control panel to the (–) terminal of the supplementary power supply (black wire).
4. Connect the (–) terminal of the supplementary power supply to terminal block position 3 (GND terminal of the 6270 (black wire)).
5. Connect Data Out terminal of the control panel to terminal block position 1 (Data In terminal of the 6270 (yellow wire)).
6. Connect the Data In terminal of the control panel to header terminal block position 4 (Data Out terminal of the 6270 (green wire)).
7. Attach the case front of the 6270 to the case back. Attach the top of the case first, and then press the bottom section inward until it snaps into place securely.

Front Panel LEDs and Buttons

In This Section

- ◆ Front Panel LEDs
- ◆ Front Panel Buttons

Front Panel LEDs



Front Panel LEDs and Buttons

LED	DESCRIPTION
ARMED	ON – Security system is armed. OFF – Security system is not armed.
READY	ON – Security system is disarmed and ready to arm. OFF – Security system is armed or disarmed but not ready. If disarmed, faults or troubles are present.
MESSAGE	FLASHING – The 6270 contains message(s) for the User OFF – No messages.

Front Panel Buttons

BUTTON	DESCRIPTION
HOME	Used to return to the HOME screen display from any sub-menus.
FUNC	Reserved for future use.
PANIC	Used to display the EMERGENCY screen (Fire or Panic signal generation).
BACK	Used to exit the current screen display and return to the prior screen display.
▲	Used to scroll through screen lists in an upward direction.
▼	Used to scroll through screen lists in a downward direction.

Initial Setup

.....

In This Section

- ◆ *Programming the Control Panel*
- ◆ *6270 Initialization*
- ◆ *How to Change the ECP Address*
- ◆ *How to Access the Central Station Screen*
- ◆ *6270 Setup*
- ◆ *Setting Chime Mode On / Off*

.....

Programming the Control Panel

The 6270 will not be fully operational unless its address in the control panel has been enabled for an alpha console, AUI type device, and assigned to a partition (where applicable). Refer to “Compatibility” on page 1–2 of this document for the quantity of 6270s that may be used and the required control panel software revision level.

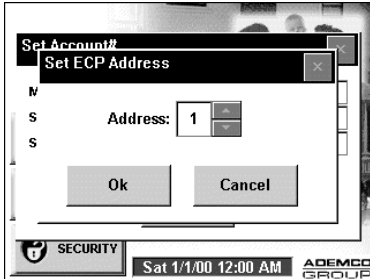
On residential control panels (VISTA-20PS or equivalent), two 6270s may be used (addresses 1 and 2). These addresses (in field *189) are enabled by default. If the defaults have been changed, enable these addresses (in field *189) using an alpha-keypad and the Data Field Programming procedures located in the panel Installation and Setup Guide.

On commercial control panels (VISTA-128BP, VISTA-128FBP, or equivalent), addresses between 1 through 30 may be used for the 6270. These addresses in the control panel are normally not defaulted for AUI type devices. To enable the addresses you will be using for 6270s, use an alpha-keypad and follow the procedures for “Device Programming” in your control panel “Programming Guide.”

6270 Initialization

Power Up

When initially powered, the screen displays the boot sequence as it is performed. After it is determined what services are available, the screen displays the Set ECP Address screen.

SCREEN	ACTION
	<p>If the system is incorporating only one 6270, leave the address set to 1 and press the OK button. The boot-up process will continue until completion.</p> <p>If there are to be additional 6270 units in the system, refer to the <i>How to Change the ECP Address</i> paragraph.</p>

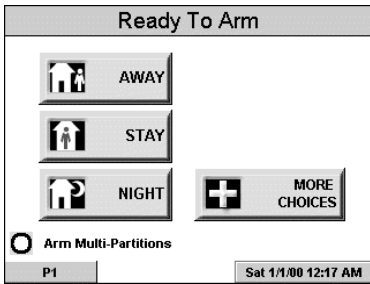
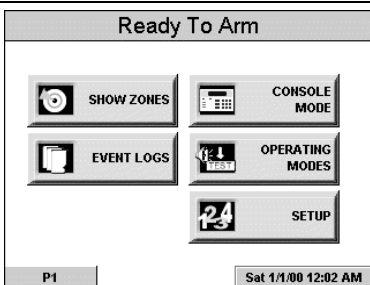
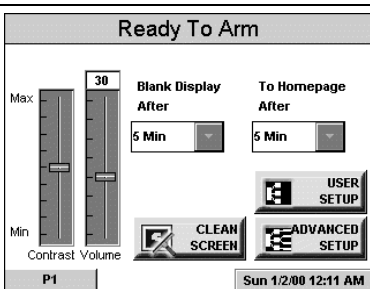
How to Change the ECP Address

After enabling addresses in the control panel using an alpha-keypad, power up each 6270 one at a time, and set its address to one of the addresses you enabled in the control panel. If this is a first time power-up of the unit, follow the initialization procedure in this section. Otherwise, access the Central Station screen then follow the procedure to change the address on the unit.

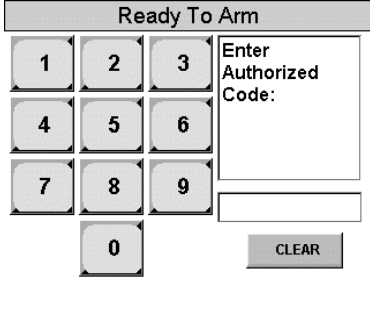
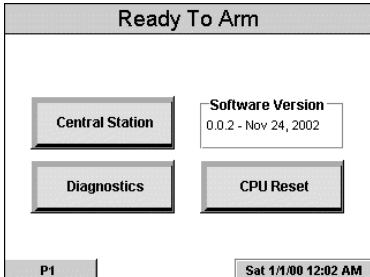
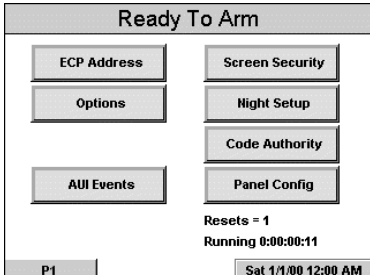
How to Access the Central Station Screen

To Access the “Central Station” screen perform the following:

1. Press the **SECURITY** button on the “Home” screen. The “Arming” screen is displayed.

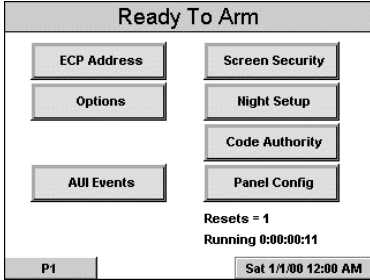
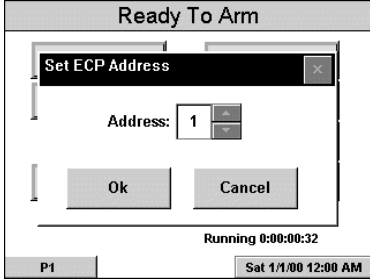
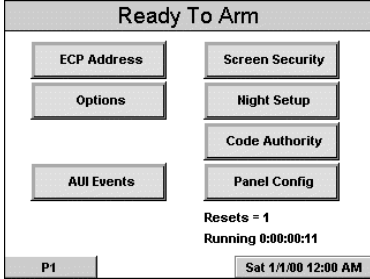

SCREEN	ACTION
	<ol style="list-style-type: none"> 2. Press the MORE CHOICES button. The “More Choices” screen is displayed.
	<ol style="list-style-type: none"> 3. Press the SETUP button on the “More Choices” screen. The “Setup” screen is displayed.
	<ol style="list-style-type: none"> 4. Press the ADVANCED SETUP button. The Enter Authorized Code: authorization screen is displayed.

6270 Installation and Setup Guide

SCREEN	ACTION
	<p>5. Enter your 4-digit Installer code. The “Advanced Setup” menu screen is displayed.</p> <p>Note: If the top of the screen is displaying ECP Error, the ECP address in the 6270 is not valid for the panel that it is connected to. To change the ECP address in the 6270 when ECP Error is being displayed, enter the 6270 default code of “4140” to advance to the next screen.</p>
	<p>6. Press the Central Station button. The “Central Station” menu screen is displayed.</p>
	

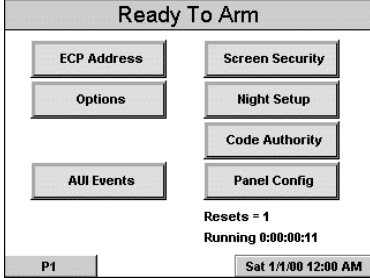
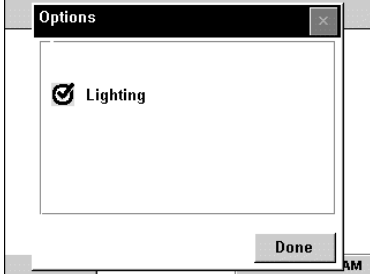
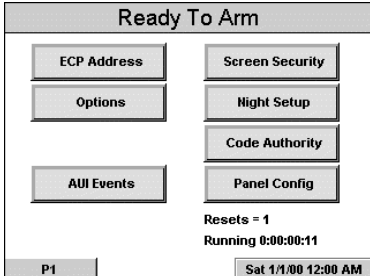
SECTION 4: Initial Setup

To change the address, perform the following.

SCREEN	ACTION
	<p>1. On the "Central Station" screen press the ECP Address button. A pop-up window is displayed with options for selecting the 6270's ECP address.</p>
	<p>2. The available ECP addresses are: 1-2 for residential controls or 1-30 for commercial controls Select the ECP address for this 6270 using the Up/Dn arrows. Press the OK button to accept the address setting or the CANCEL button to maintain the original ECP address. The 6270 goes to the "Central Station" menu screen.</p>
	<p>3. Press the "Back" button <u>three times</u> to save the new address. The "More Choices" screen is displayed.</p>
	

How to Select System Options

The system options allow you to place buttons on the "Home" screen. The **SECURITY** and **MESSAGES** buttons are always displayed and cannot be removed. A Lighting button can also be added to the "Home" screen. To avoid confusion to the user, only buttons whose options are functional in the system should be displayed. To select the system options, do the following:

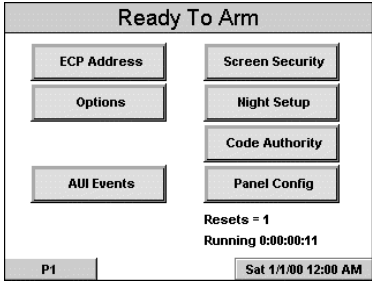

SCREEN	ACTION
	<p>1. On the "Central Station" screen press the Options button. A pop-up window is displayed with an option for selecting Lighting.</p>
	<p>2. Touch the Lighting button to turn the Lighting option on or off. A checkmark appears in the button with the Lighting option is "ON".</p> <p>Press the DONE button to accept the setting. The 6270 returns to the "Central Station" menu screen.</p>
	


How to Set the NIGHT Setup Button Function

The NIGHT button can be set to arm the system in one of four arming modes:

- Away - When selected, arms all zones with entry delay.
- Stay - When selected, arms perimeter zones with entry delay.
- Instant - When selected, arms perimeter zones without entry delay.
- Maximum - When selected, arms all zones without entry delay.


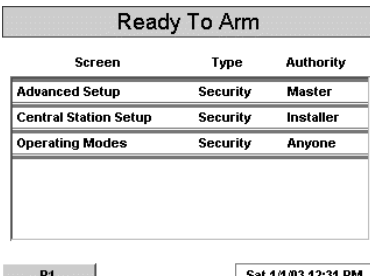
To set the NIGHT button function, do the following:

SCREEN	ACTION
	<p>1. On the "Central Station" screen press the Night Setup button. A Night Setup: pop-up window is displayed with options for selecting Away, Stay, Instant, and Maximum.</p>
	<p>2. Select the arming mode that will be activated by pressing the NIGHT button on the "Arming" screen. Press the Ok button to accept the setting, or press the Cancel button to cancel your selection. In either case the 6270 goes to the "Central Station" menu screen.</p>

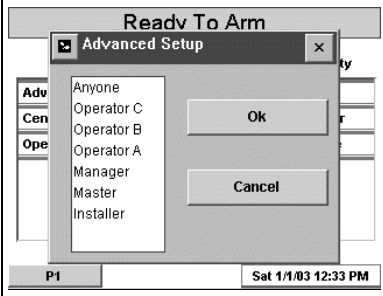
SCREEN	ACTION
	

How to View and Edit Screen Security

The **Screen Security** button displays a screen that lists the various screen classes in the 6270 and lists what level user has been given access to them. To view and/or edit screen security, do the following:

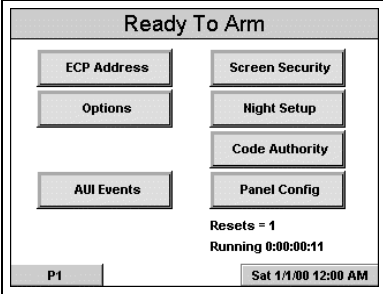
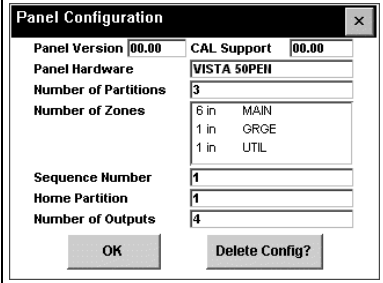
SCREEN	ACTION												
	<p>1. On the “Central Station” screen, press the Screen Security button. A listing of the classes of screens and the user level that has access to them will be displayed.</p>												
 <table border="1" data-bbox="393 1312 747 1501"> <thead> <tr> <th>Screen</th> <th>Type</th> <th>Authority</th> </tr> </thead> <tbody> <tr> <td>Advanced Setup</td> <td>Security</td> <td>Master</td> </tr> <tr> <td>Central Station Setup</td> <td>Security</td> <td>Installer</td> </tr> <tr> <td>Operating Modes</td> <td>Security</td> <td>Anyone</td> </tr> </tbody> </table>	Screen	Type	Authority	Advanced Setup	Security	Master	Central Station Setup	Security	Installer	Operating Modes	Security	Anyone	<p>2. If the listing is correct, depress the BACK button to return to the “Central Station” screen. If changes are necessary, select the line to be changed and a Setup screen will be displayed.</p> <p>Note: The Setup screen contains a heading of Advanced Setup, Central Station Setup, or Operating Modes indicating which line was selected for change.</p>
Screen	Type	Authority											
Advanced Setup	Security	Master											
Central Station Setup	Security	Installer											
Operating Modes	Security	Anyone											

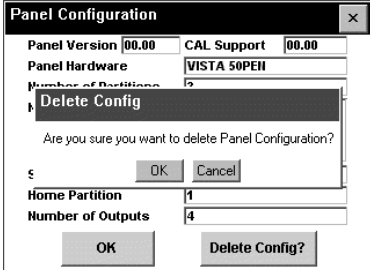
SECTION 4: Initial Setup

SCREEN	ACTION
	<p>3. Select the level of user who is to have access to the selected class of screens and then select the OK button. The Screen Security screen will be re-displayed listing the change. Depress the BACK button to return to the “Central Station” screen.</p>

How to View the Panel Configuration

The **Panel Config** button displays a screen that contains the configuration of the panel that the 6270 is connected to. To view the panel configuration, do the following:

SCREEN	ACTION
	<p>1. On the “Central Station” screen press the Panel Config button. A Panel Configuration screen will be displayed providing details of your system.</p>
	<p>2. Depress the OK button to return to the “Central Station” screen or if you desire to clear the configuration from the 6270 and have it reload the panel configuration into the 6270 from the panel, depress the Delete Config? button. After you depress the Delete Config? button, a confirmation screen is displayed.</p>

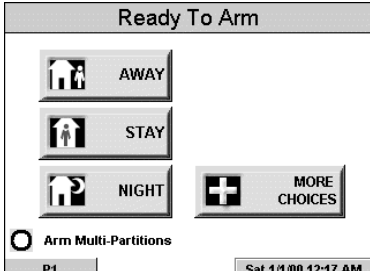
SCREEN	ACTION
	<p>3. Select OK to delete the configuration or Cancel to return to the "Panel Configuration" screen. If you select OK, the 6270 will be reset and the panel configuration will be downloaded from the panel into the 6270. After the reset and download is complete, the "Home" screen is displayed.</p>

6270 Setup


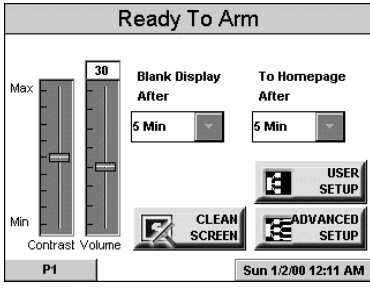
Setup allows you to adjust the touch screen contrast and/or adjust the 6270 speaker volume. You may also select the time interval that must pass prior to the 6270 going into screen saver mode (screen goes blank). Additionally, you may enter the **User Setup** screen, **Advanced Setup** screen, or **Clean Screen** (maintenance mode) from the "Setup" screen by pressing the corresponding button.

Access the "Setup" screen as follows:

1. From the "Home" screen, press the **SECURITY** button. The "Arming" screen is displayed.

SCREEN	ACTION
	<p>2. Press the MORE CHOICES button. The "More Choices" screen is displayed.</p>

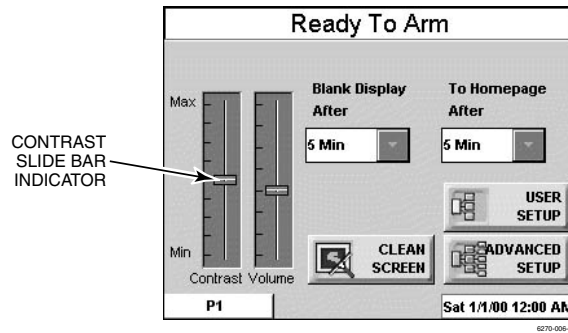
SECTION 4: Initial Setup

SCREEN	ACTION
	<p>3. Press the SETUP button on the "More Choices" screen. The "Setup" screen is displayed.</p>
	<p>4. Adjust the touch screen options as described in the paragraphs that follow.</p>

How to Adjust the Touch Screen Contrast

You may adjust the touch screen contrast as follows:

<i>If...</i>	<i>Then...</i>
you want to increase contrast	press the slide bar above the current contrast setting.
you want to decrease contrast	press the slide bar below the current contrast setting.
another adjustment or selection is to be made	go to the corresponding paragraph in this section.
no additional adjustment or selection is to be made	press the BACK button, or press the HOME button on the 6270 to return to your home screen.

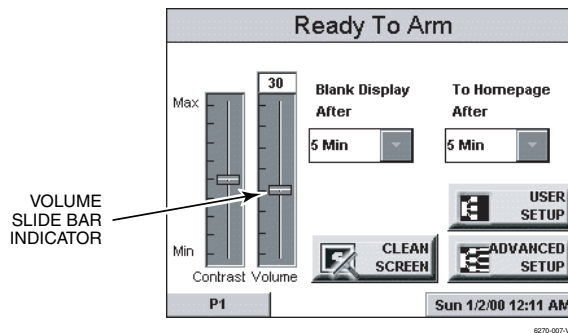


Touch Screen Contrast Control

How to Adjust the Volume

You may adjust the 6270 speaker volume by pressing your finger on the touch screen slide bar associated with the "Volume" scale and doing the following:

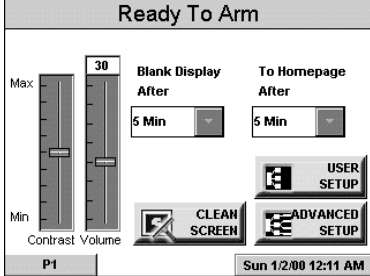
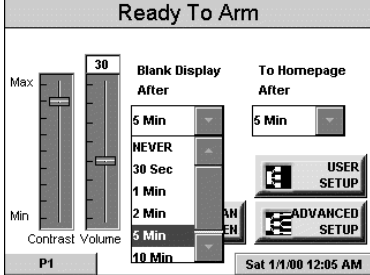
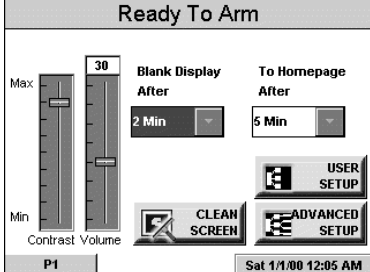
<i>If...</i>	<i>Then...</i>
you want to increase volume	press the slide bar above the current volume setting.
you want to decrease volume	press the slide bar below the current volume setting.

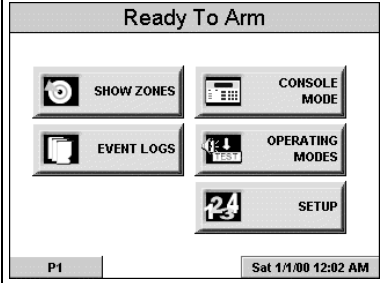


Volume Control

How to Select Screen Saver Activation Time

When the 6270 is not armed and not active, it will automatically go into screen saver mode (display goes blank) after the selected blank display time has expired (unless you select “never”). To select the time after which the screen will go blank, do the following:

SCREEN	ACTION
	<p>1. Press the Blank Display After: "arrow" button. A pull-down menu displaying the time period options is displayed.</p>
	<p>2. Select the time period option you want by pressing it. The pop-up window closes automatically and the selection is displayed in blue.</p> <p>Note: Additional options can be viewed by using the up/down "arrows" to scroll through the time period options.</p>
	<p>3. Press either the "Home" or "Back" button. A Settings Changed! pop-up window is displayed asking "Settings Changed! Remember New Settings?" Select Yes to save the change or No to discard the change.</p>

SCREEN	ACTION
	<p>When the Update is complete the 6270 goes to the "Home" screen or "More Choices" screen depending on whether you pressed the "Home" or "Back" button, respectively ("More Choices" screen shown).</p>

How to Set the Time and Date

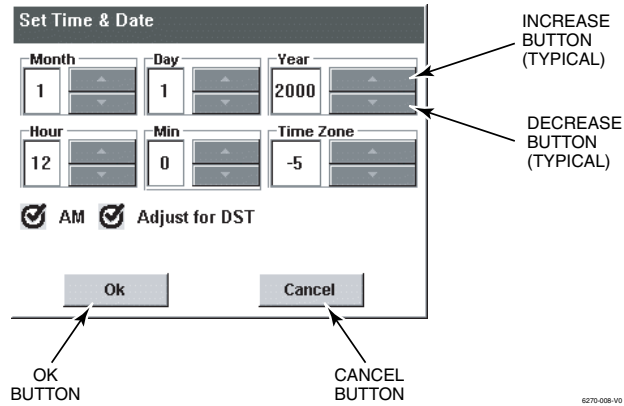
You can set the time and date from the **Set Time & Date** screen. Pressing the Time and Date bar located at the bottom of each 6270 screen displays the **Set Time & Date** screen.

When the time is set it will be stored in the 6270 only. The 6270 will send the time to the control panel every hour. This 1-hour timer starts on 6270 power-up.

If **Adjust for DST** (Daylight Savings Time) is selected, the 6270 will adjust for Daylight Savings time. When selected, the next time the 1-hour timer expires, the new value will be sent to the control panel.

IMPORTANT: This means that the 6270 setting will override and overwrite the control panel time setting. That is, if the control panel is set to DST and adjusts but the 6270 is not, upon the 1-hour timer expiration, the control panel will be updated to the current time that is not adjusted for DST.

From the **Set Time & Date** screen, adjust either or both the time and date by pressing the increase or decrease arrow buttons as necessary until the proper month, day, year, hour, and minute are displayed.



Set Time & Date Screen

When all settings have been completed, select **Ok** to save the settings or **Cancel** to discard the settings that have been entered.

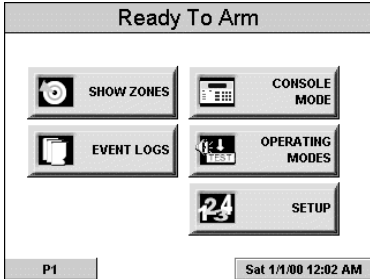
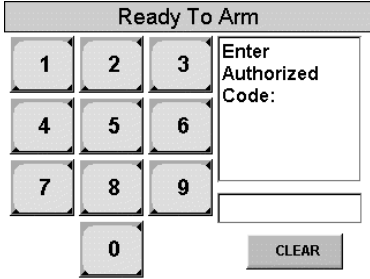
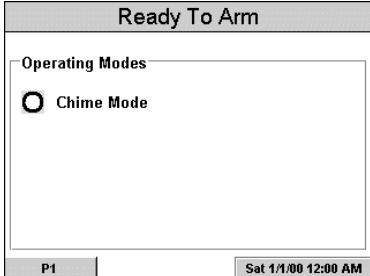
Setting Chime Mode On/Off

Operating modes allows you to turn the 6270 chime mode on or off. When the chime mode is selected, a request is sent to the alarm panel requesting that the panel chime the 6270 whenever an entry/exit or perimeter zone is opened.

Access the "Operating Modes" screen as follows:

1. From the "Home" screen, press the **SECURITY** button. The "Arming" screen is displayed.

SCREEN	ACTION
	<ol style="list-style-type: none"> 2. Press the MORE CHOICES button. The "More Choices" screen is displayed.

SCREEN	ACTION
	<p>3. Press the OPERATING MODES button on the "More Choices" screen. The "User Authorization" screen is displayed with the instructions "Enter Authorized Code".</p>
	<p>4. Enter your "Installer" code. The "Operating Modes" screen is displayed.</p>
	<p>5. Touch the Chime Mode button to turn the Chime Mode on or off. A checkmark appears in the button when the Chime Mode is "ON".</p> <p>Press the "HOME" or "BACK" button after making your selection. When the 6270 exits the "Operating Modes" screen, your selection is saved.</p>

User Codes

.....

In This Section

- ◆ *Introduction to User Code Setup*
- ◆ *How to Access User Setup*

.....

Introduction to User Code Setup

Each user must be assigned a name with a corresponding 4-digit user code in order to gain access to various features and functions. Through the 6270, you may program users to access any and all of the following systems:

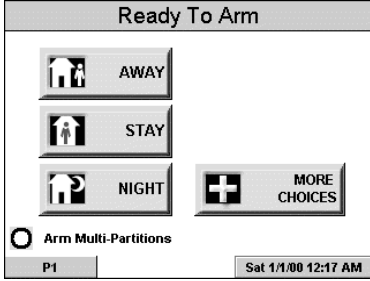
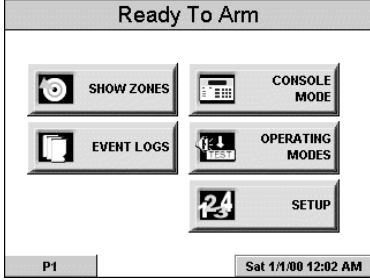
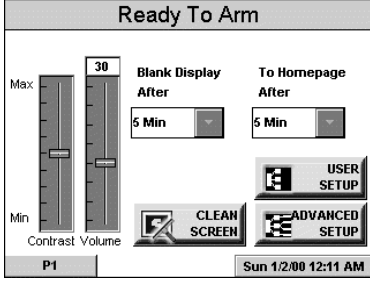
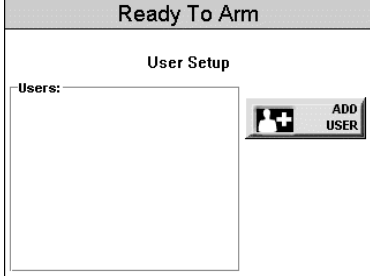
- Fire/Burglary (Security)
- Lighting
- Messages

Users for the systems are programmed in a central user setup location that provides the specific questions for the user pertaining to each system. You may want these users to be the same, but there are situations in which you may want a user to have access to one system (e.g., Messages) without having access to another (e.g., the Fire/Burglary system).

How to Access User Setup

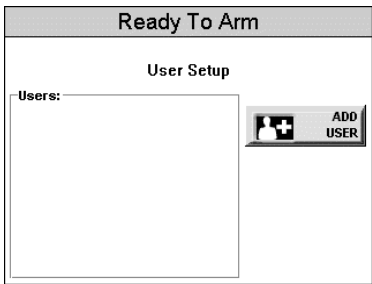
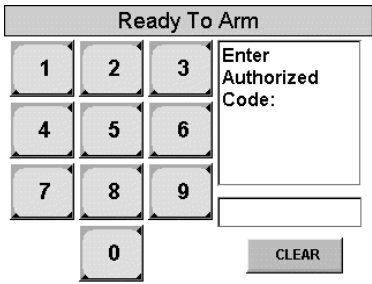
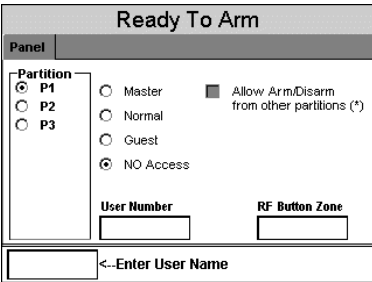
Access User Setup as follows:

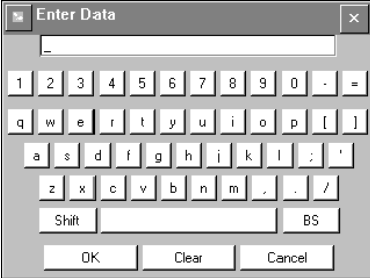
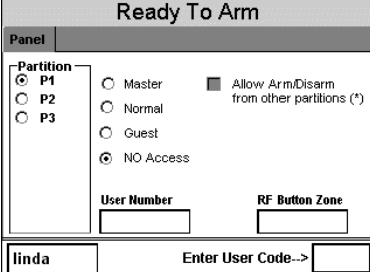
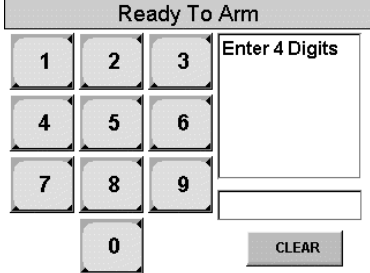
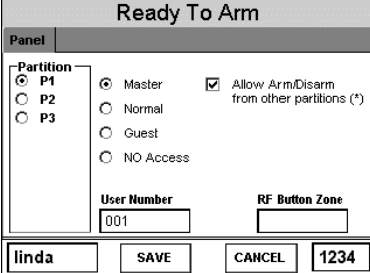
1. From the "Home" screen, press the **SECURITY** button. The "Arming" screen is displayed.

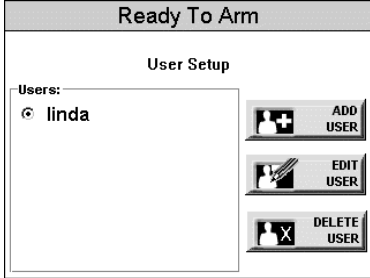
SCREEN	ACTION
	<p>2. Press the MORE CHOICES button. The "More Choices" screen is displayed.</p>
	<p>3. Press the SETUP button on the "More Choices" screen. The "Setup" screen is displayed.</p>
	<p>4. Press the USER SETUP button on the "Setup" screen. The User Setup screen is displayed.</p>
	

How to Add a User

Add a User as follows:

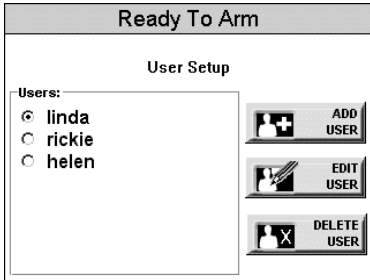
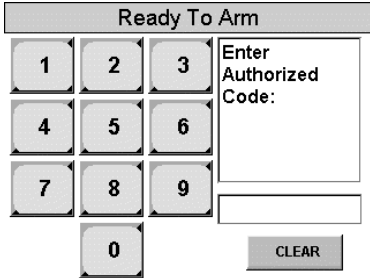
SCREEN	ACTION
 <p>The screenshot shows the 'Ready To Arm' screen with a 'User Setup' section. It includes a list of users (currently empty), an 'ADD USER' button with a plus sign icon, and a 'Panel' indicator at the top.</p>	<p>1. To add a user, press the ADD USER button. The "User Authorization" screen is displayed with the instructions "Enter Authorized Code".</p>
 <p>The screenshot shows the 'Ready To Arm' screen with a numeric keypad (0-9) and a 'CLEAR' button. A text input field labeled 'Enter Authorized Code' is visible on the right side.</p>	<p>2. Enter your Authorized code. The "User Options" screen is displayed. Note: The authorized code for adding users is dependent upon the alarm panel you are interfacing with. Check your alarm panel Installation and Setup Guide to determine who can add users.</p>
 <p>The screenshot shows the 'Ready To Arm' screen with 'User Options'. It includes radio buttons for 'Partition' (P1, P2, P3) and 'Access Level' (Master, Normal, Guest, NO Access). There are also checkboxes for 'Allow Arm/Disarm from other partitions (*)' and input fields for 'User Number' and 'RF Button Zone'. A prompt '<-Enter User Name' is at the bottom.</p>	<p>3. Press the box next to Enter User Name. The Enter Data keyboard screen is displayed.</p>

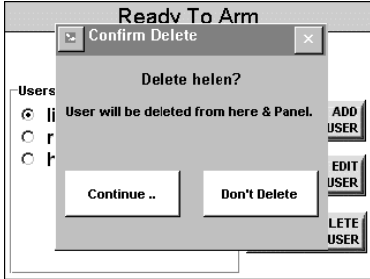
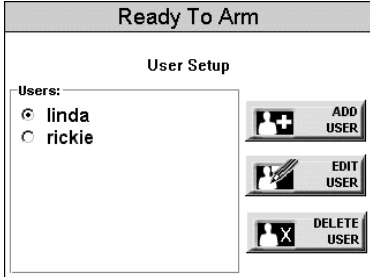
SCREEN	ACTION
	<p>4. Type in the user name (6 characters max.) and press the OK button. The "User Options" screen is displayed with Enter User Code... displayed.</p>
	<p>5. Touch the box next to Enter User Code... The "User Authorization" screen is displayed with the instructions "Enter 4 Digits".</p>
	<p>6. Enter the 4-digit code for this user. The "User Options" screen is displayed with the user's name and code displayed.</p>
	<p>7. Select the partitions, access level, and enter a user number for this user. If assigning this user to wireless key, enter one of the zone numbers of the keyfob (the wireless key must be programmed first before it can be assigned to a user).</p>

SCREEN	ACTION
	<p>8. Press the Save button. The system will save the configuration. When the save is complete, the User Setup screen is displayed with the new user's name shown.</p>

How to Delete a User

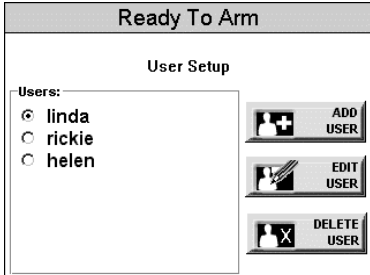
Delete a User as follows:

SCREEN	ACTION
	<p>Three selections are available: add a user, edit a user, or delete a user.</p> <p>1. To delete a user, touch the circle next to the user to be deleted and press the DELETE USER button. The "User Authorization" screen is displayed with the instructions "Enter Authorized Code".</p>
	<p>2. Enter your Authorized code. The Confirm Delete screen is displayed.</p> <p>Note: The authorized code for deleting, adding, and editing users is dependent upon the alarm panel you are interfacing with. Check your alarm panel Installation and Setup Guide to determine who can delete, add, and edit users.</p>

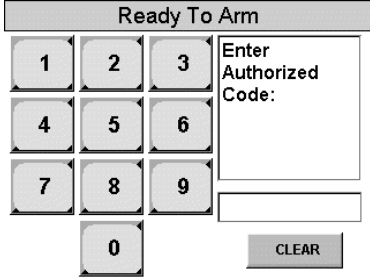
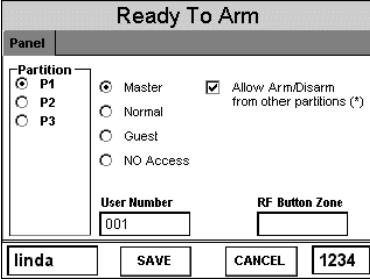
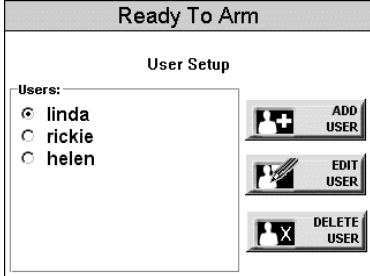
SCREEN	ACTION
	<p>3. Press the appropriate button. The User Setup screen is displayed.</p>
	

How to Edit a User

Edit a User as follows:

SCREEN	ACTION
	<p>Three selections are available: add a user, edit a user, or delete a user.</p> <p>1. To edit a user, touch the circle next to the user to be edited and press the EDIT USER button. The "User Authorization" screen is displayed with the instructions "Enter Authorized Code".</p>

SECTION 5: User Codes

SCREEN	ACTION
 <p>Ready To Arm</p> <p>1 2 3 Enter Authorized Code: 4 5 6 7 8 9 0 CLEAR</p>	<p>2. Enter your Authorized code. The “User Options” screen is displayed.</p> <p>Note: The authorized code for deleting, adding, and editing users is dependent upon the alarm panel you are interfacing with. Check your alarm panel Installation and Setup Guide to determine who can delete, add, and edit users.</p>
 <p>Ready To Arm</p> <p>Panel</p> <p>Partition <input checked="" type="radio"/> P1 <input type="radio"/> P2 <input type="radio"/> P3</p> <p> <input checked="" type="radio"/> Master <input checked="" type="checkbox"/> Allow Arm/Disarm from other partitions (*) <input type="radio"/> Normal <input type="radio"/> Guest <input type="radio"/> NO Access </p> <p>User Number: 001 RF Button Zone: 1234</p> <p>linda SAVE CANCEL 1234</p>	<p>3. Select whatever options you wish to select for this user and press the Save button. The configuration changes are saved and you are returned to the User Setup screen.</p>
 <p>Ready To Arm</p> <p>User Setup</p> <p>Users: <input checked="" type="radio"/> linda <input type="radio"/> rickie <input type="radio"/> helen </p> <p>ADD USER EDIT USER DELETE USER</p>	

Maintenance



In This Section

- ◆ *About 6270 Maintenance* ◆ *Routine Care*
- ◆ *How to Clean the 6270*



About 6270 Maintenance

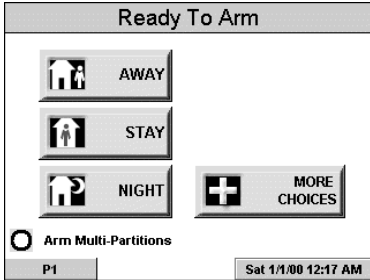
With the exception of normal cleaning, the 6270 is maintenance free.

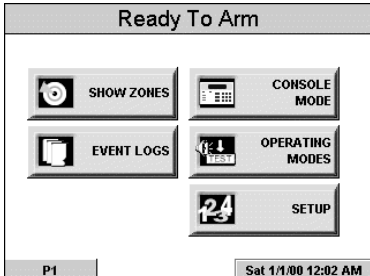
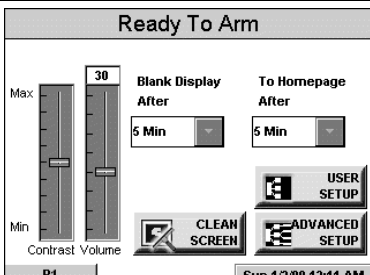
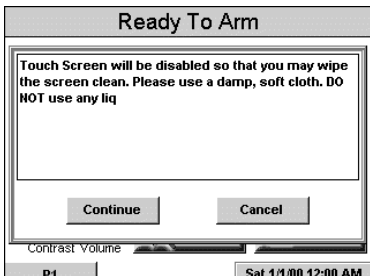
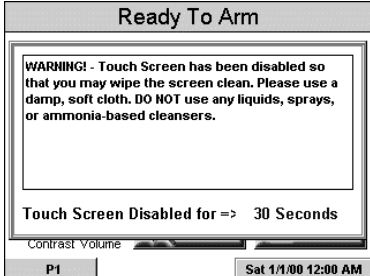
How to Clean the 6270

IMPORTANT: Do not use an abrasive cleaning agent or abrasive cloth when cleaning the 6270 or damage to the touch screen may occur.

Clean the 6270 as follows:

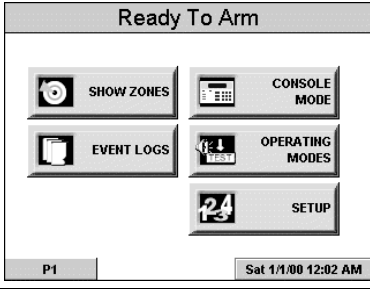
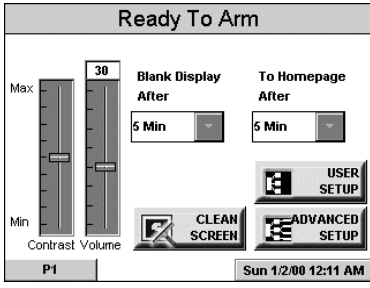
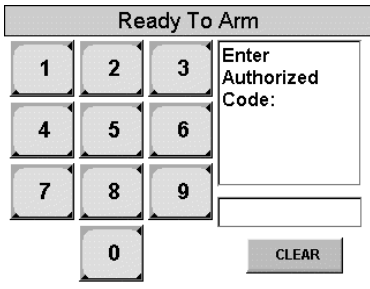
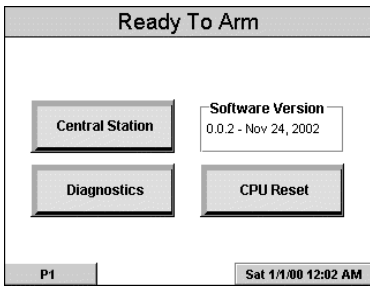
1. From the "Home" screen, press the **SECURITY** button. The "Arming" screen is displayed.

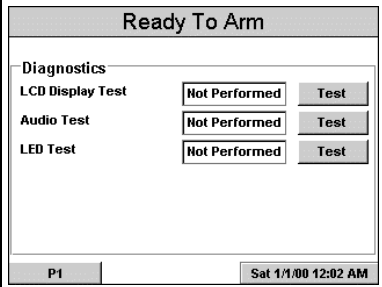
SCREEN	ACTION
	<ol style="list-style-type: none"> 2. Press the MORE CHOICES button. The "More Choices" screen is displayed.

SCREEN	ACTION
	<p>3. Press the SETUP button on the "More Choices" screen. The "Setup" screen is displayed.</p>
	<p>4. Press the CLEAN SCREEN button. A pop-up window displaying "Touch Screen will be disabled so that you may wipe the screen clean. Please use a damp, soft cloth. DO NOT use any liquids, sprays, or ammonia-based cleansers. Press CONTINUE to disable touchscreen."</p> <p>When the Continue button is pressed the "Touch Screen Disabled for => 30 Seconds". During these 30 seconds the touch screen should be wiped clean of fingerprints using a mild soap solution and a soft cloth. When the counter reaches zero, the window automatically closes and the touch screen is active.</p> <p>Note: Do not spray cleaning agent directly on the screen, spray it on cloth then wipe surface area.</p>
	
	

Routine Care

- Treat the components of the security system as you would any other electrical equipment. Do not slam sensor-protected doors or windows.
- Keep dust from accumulating on the keypad and all protective sensors, particularly on motion sensors and smoke detectors.
- The keypad and sensors should be cleaned carefully with a dry soft cloth. ***Do not spray water or any other fluid on the units.***

SCREEN	ACTION
	<p>3. Press the SETUP button on the "More Choices" screen. The "Setup" screen is displayed.</p>
	<p>4. Press the Advanced Setup button on the "Setup" screen. The Enter Authorized Code screen is displayed.</p>
	<p>5. Enter your 4-digit Installer code. The "Advanced Setup" menu screen is displayed.</p>
	<p>6. Press the Diagnostics button on the "Advanced Setup" menu screen. The "Diagnostics" screen is displayed.</p>

SCREEN	ACTION
	

Performing Diagnostics

Select any diagnostic test from the Diagnostics screen by pressing its associated **Test** button. All or any individual test may be run when you access the Diagnostics screen; however, each test must be performed one at a time.

At any time when a test is not being performed, you can press:

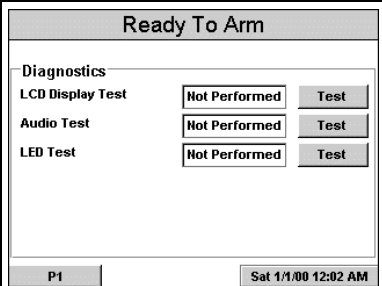
- the back button to return to the previous screen, or
- the home button to return to your home page.


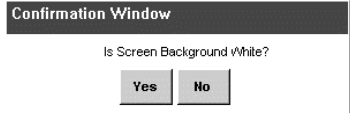
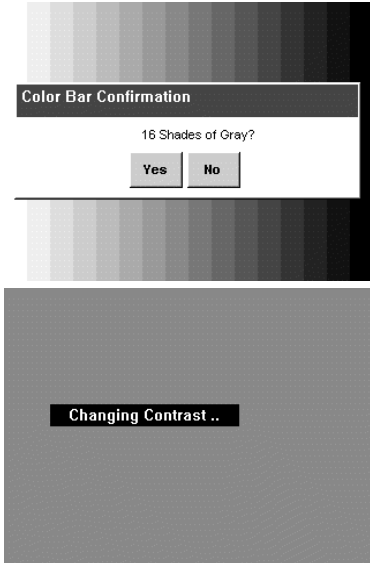


Once the Diagnostics screen is exited, subsequent entry to this screen displays all test options as "Not Performed."

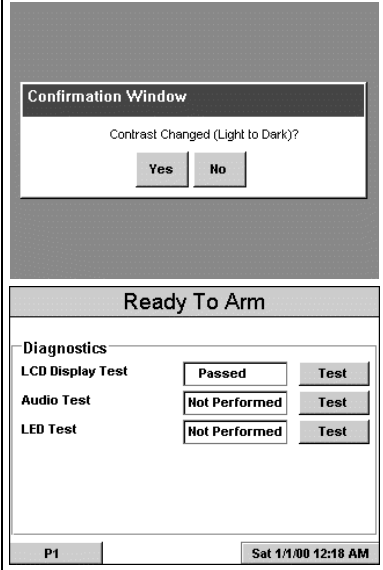
LCD Display Test

Perform the LCD Display Test as follows:

SCREEN	ACTION
	<p>1. When you press the Test button associated with the LCD Display Test, a pop-up "Confirmation Window" is displayed in the center of the screen with an all black background. Within the Confirmation Window the question "Is Screen Background Black?" is displayed.</p>

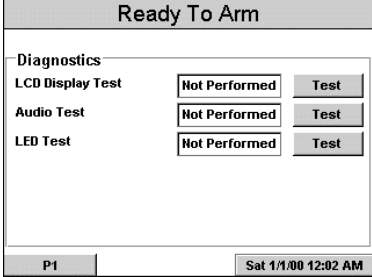
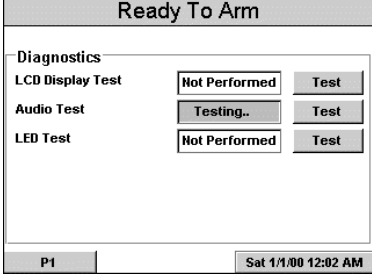
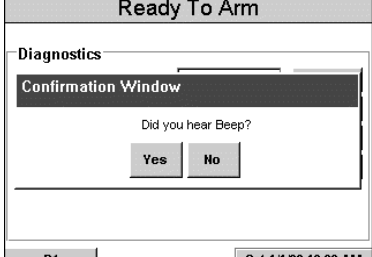
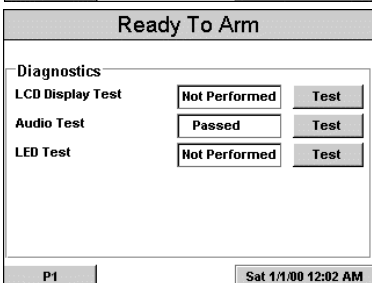
SCREEN	ACTION
	<p>2. When you press the Yes or No button accordingly, automatically a pop-up "Confirmation Window" is displayed in the center of the screen with an all white background. Within the Confirmation Window the question "Is Screen Background White?" is displayed.</p>
	<p>3. When you press the Yes or No button accordingly, automatically a pop-up "Confirmation Window" is displayed in the center of the screen with the background in 16 shades of gray. Within the Confirmation Window the question "16 Shades of Gray?" is displayed.</p>
	<p>4. When you press the Yes or No button accordingly, automatically the contrast test begins from light to dark. "Changing Contrast.." is displayed in the center of the screen during this time.</p> <p>At the conclusion of the contrast test a Pop-Up Confirmation Window is displayed in the center of the screen. Within the Confirmation Window the question "Contrast Changed (Light to Dark)?" is displayed.</p>

SECTION 7: Troubleshooting

SCREEN	ACTION
 <p>The screenshot shows two parts of the user interface. The top part is a 'Confirmation Window' with a dark header and a white body containing the text 'Contrast Changed (Light to Dark)?' and two buttons labeled 'Yes' and 'No'. The bottom part is the 'Ready To Arm' screen, which has a grey header. Below the header is a 'Diagnostics' section with a white background. It lists three tests: 'LCD Display Test' with a 'Passed' status and a 'Test' button; 'Audio Test' with a 'Not Performed' status and a 'Test' button; and 'LED Test' with a 'Not Performed' status and a 'Test' button. At the bottom of the screen, there is a status bar with 'P1' on the left and 'Sat 1/1/00 12:18 AM' on the right.</p>	<p>5. When you press the Yes or No button accordingly, the "Diagnostics" screen is displayed with the LCD Display Test results ("Passed" or "Failed") shown in the test status column.</p> <p>Note: If the response was no (the No button is pressed) to any question of this test, when the system is returned to the Diagnostics screen, "Failed" is displayed in test status column.</p>

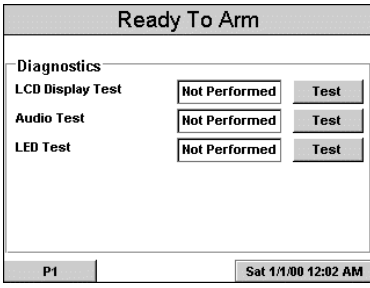
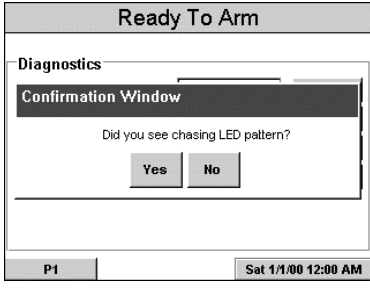
Audio Test

Perform the Audio Test as follows:

SCREEN	ACTION
	<p>When you press the Test button associated with the Audio Test "Testing.." is displayed in the test status column on the "Diagnostics" screen while beeps sound from the speaker. At the conclusion of the test, a pop-up "Confirmation Window" is displayed in the center of the "Diagnostics" screen.</p> <p>Within the Confirmation Window the question "Did you hear Beep?" is displayed.</p>
	<p>When you press the Yes button, "Passed" is displayed in the test status column on the "Diagnostics" screen.</p>
	<p>When you press the No button, "Failed." is displayed in the test status column on the "Diagnostics" screen.</p>
	

LED Test

Perform the LED Test as follows:

SCREEN	ACTION
 <p>Ready To Arm</p> <p>Diagnostics</p> <p>LCD Display Test <input type="button" value="Not Performed"/> <input type="button" value="Test"/></p> <p>Audio Test <input type="button" value="Not Performed"/> <input type="button" value="Test"/></p> <p>LED Test <input type="button" value="Not Performed"/> <input type="button" value="Test"/></p> <p>P1 Sat 1/1/00 12:02 AM</p>	<p>1. When you press the Test button associated with the LED Test, "Testing.." is displayed in the test status column on the "Diagnostics" screen while the 3 LEDs light sequentially, top to bottom (red, green, amber), 5 times. At the conclusion of the test, a pop-up "Confirmation Window" is displayed in the center of the "Diagnostics" screen.</p>
 <p>Ready To Arm</p> <p>Diagnostics</p> <p>LCD Display Test <input type="button" value="Not Performed"/> <input type="button" value="Test"/></p> <p>Audio Test <input type="button" value="Not Performed"/> <input type="button" value="Test"/></p> <p>LED Test <input type="button" value="Testing.."/> <input type="button" value="Test"/></p> <p>P1 Sat 1/1/00 12:00 AM</p>	<p>2. Within the Confirmation Window the question "Did you see chasing LED pattern?" is displayed.</p> <p>If you press the Yes button, "Passed" is displayed in the test status column on the "Diagnostics" screen.</p> <p>If you press the No button, "Failed" is displayed in the test status column on the "Diagnostics" screen.</p>

SCREEN	ACTION									
<p data-bbox="500 453 643 478">Ready To Arm</p> <p data-bbox="396 506 483 525">Diagnostics</p> <table border="1" data-bbox="396 527 743 611"><tr><td data-bbox="396 527 548 552">LCD Display Test</td><td data-bbox="561 527 662 552">Not Performed</td><td data-bbox="678 527 743 552">Test</td></tr><tr><td data-bbox="396 554 548 579">Audio Test</td><td data-bbox="561 554 662 579">Not Performed</td><td data-bbox="678 554 743 579">Test</td></tr><tr><td data-bbox="396 581 548 606">LED Test</td><td data-bbox="561 581 662 606">Passed</td><td data-bbox="678 581 743 606">Test</td></tr></table> <p data-bbox="423 705 448 724">P1</p> <p data-bbox="626 705 748 724">Sat 1/1/00 12:00 AM</p>	LCD Display Test	Not Performed	Test	Audio Test	Not Performed	Test	LED Test	Passed	Test	
LCD Display Test	Not Performed	Test								
Audio Test	Not Performed	Test								
LED Test	Passed	Test								

Specifications

.....

Specifications

MECHANICAL	
Dimensions:	
Width:	6 ¼ inches
Height:	5 inches
Depth:	1 • inches
ELECTRICAL	
Operating Voltage:	
Current Drain:	
Backlight OFF, Sound OFF	180mA
Backlight ON, Sound OFF	190mA
Backlight ON, Sound ON	210mA

SECTION 9

Index

.....

About the 6270	1-1
Address Change	4-2, 4-5
Central Station Screen	
Accessing	4-3
Chime Mode	4-15
Cleaning	6-1
Compatibility	1-2
Contrast Adjustment	4-11
Date Set	4-14
Diagnostics	7-1
Audio Test	7-6
LCD Display	7-3
LED Test	7-7
Performing	7-3
ECP Error	1-2
Front Panel Buttons	3-2
Front Panel LEDs	3-1
Initialization	4-2
Maintenance	6-1
Cleaning	6-1
Routine Care	6-3
Mounting the 6270	2-1
Night Setup	4-7
Operating Modes	
Chime	4-15
Panel Configuration	
Delete	4-9
View	4-9
Power Up	4-2
Routine Care	6-3
Screen Saver Activation Adjustment	4-13
Screen Security	
Edit	4-8
View	4-8
Setup	4-10
Contrast	4-11
Screen Saver Activation Adjustment	4-13
Volume	4-12
Specifications	8-1

6270 Installation and Setup Guide

Electrical	8-1
Mechanical.....	8-1
System Features.....	1-1
System Options	
Selecting.....	4-6
Time and Date	
Set	4-14
Time Set	4-14
Troubleshooting.....	7-1
Diagnostics	7-1
Performing Diagnostics.....	7-3
User	
Adding	5-3
Deleting	5-5
Editing.....	5-6
User Code Setup.....	5-1
Access	5-1
Volume	
Adjustment.....	4-12
Wiring the 6270.....	2-2

NOTES

NOTES

NOTES

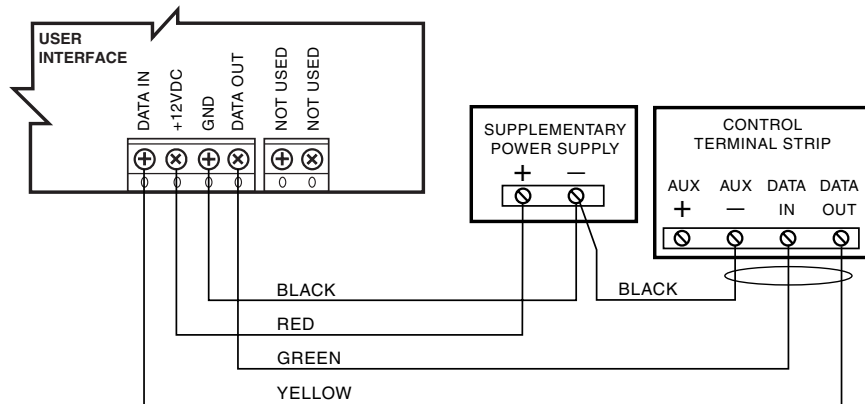
NOTES

NOTES

NOTES

NOTES

NOTES



6270-004-V0

UL Use a Listed Class 2 power supply suited for the application.

Summary of Connections

LIMITED WARRANTY

Honeywell International Inc., acting through its ADEMCO business ("Seller"), 165 Eileen Way, Syosset, New York 11791, warrants its product(s) to be in conformance with its own plans and specifications and to be free from defects in materials and workmanship under normal use and service for 24 months from the date stamp control on the product(s) or, for product(s) not having an ADEMCO date stamp, for 12 months from date of original purchase unless the installation instructions or catalog sets forth a shorter period, in which case the shorter period shall apply. Seller's obligation shall be limited to repairing or replacing, at its option, free of charge for materials or labor, any product(s) which is proved not in compliance with Seller's specifications or proves defective in materials or workmanship under normal use and service. Seller shall have no obligation under this Limited Warranty or otherwise if the product(s) is altered or improperly repaired or serviced by anyone other than ADEMCO factory service. For warranty service, return product(s) transportation prepaid, to ADEMCO Factory Service, 165 Eileen Way, Syosset, New York 11791.

THERE ARE NO WARRANTIES, EXPRESS OR IMPLIED, OF MERCHANTABILITY, OR FITNESS FOR A PARTICULAR PURPOSE OR OTHERWISE, WHICH EXTEND BEYOND THE DESCRIPTION ON THE FACE HEREOF. IN NO CASE SHALL SELLER BE LIABLE TO ANYONE FOR ANY CONSEQUENTIAL OR INCIDENTAL DAMAGES FOR BREACH OF THIS OR ANY OTHER WARRANTY, EXPRESS OR IMPLIED, OR UPON ANY OTHER BASIS OF LIABILITY WHATSOEVER, EVEN IF THE LOSS OR DAMAGE IS CAUSED BY THE SELLER'S OWN NEGLIGENCE OR FAULT.

Seller does not represent that the product(s) it sells may not be compromised or circumvented; that the product(s) will prevent any personal injury or property loss by burglary, robbery, fire or otherwise; or that the product(s) will in all cases provide adequate warning or protection. Customer understands that a properly installed and maintained alarm system may only reduce the risk of a burglary, robbery, fire, or other events occurring without providing an alarm, but it is not insurance or a guarantee that such will not occur or that there will be no personal injury or property loss as a result. CONSEQUENTLY, SELLER SHALL HAVE NO LIABILITY FOR ANY PERSONAL INJURY, PROPERTY DAMAGE OR OTHER LOSS BASED ON A CLAIM THAT THE PRODUCT(S) FAILED TO GIVE WARNING. HOWEVER, IF SELLER IS HELD LIABLE, WHETHER DIRECTLY OR INDIRECTLY, FOR ANY LOSS OR DAMAGE ARISING UNDER THIS LIMITED WARRANTY OR OTHERWISE, REGARDLESS OF CAUSE OR ORIGIN, SELLER'S MAXIMUM LIABILITY SHALL NOT IN ANY CASE EXCEED THE PURCHASE PRICE OF THE PRODUCT(S), WHICH SHALL BE THE COMPLETE AND EXCLUSIVE REMEDY AGAINST SELLER.

This warranty replaces any previous warranties and is the only warranty made by Seller on this product(s). No increase or alteration, written or verbal, of the obligations of this Limited Warranty is authorized.

ADEMCO

A Honeywell Company

165 EILEEN WAY, SYOSSET, NY 11791

Copyright © 2003 Honeywell International Inc.

www.ademco.com



K0977 4/03